

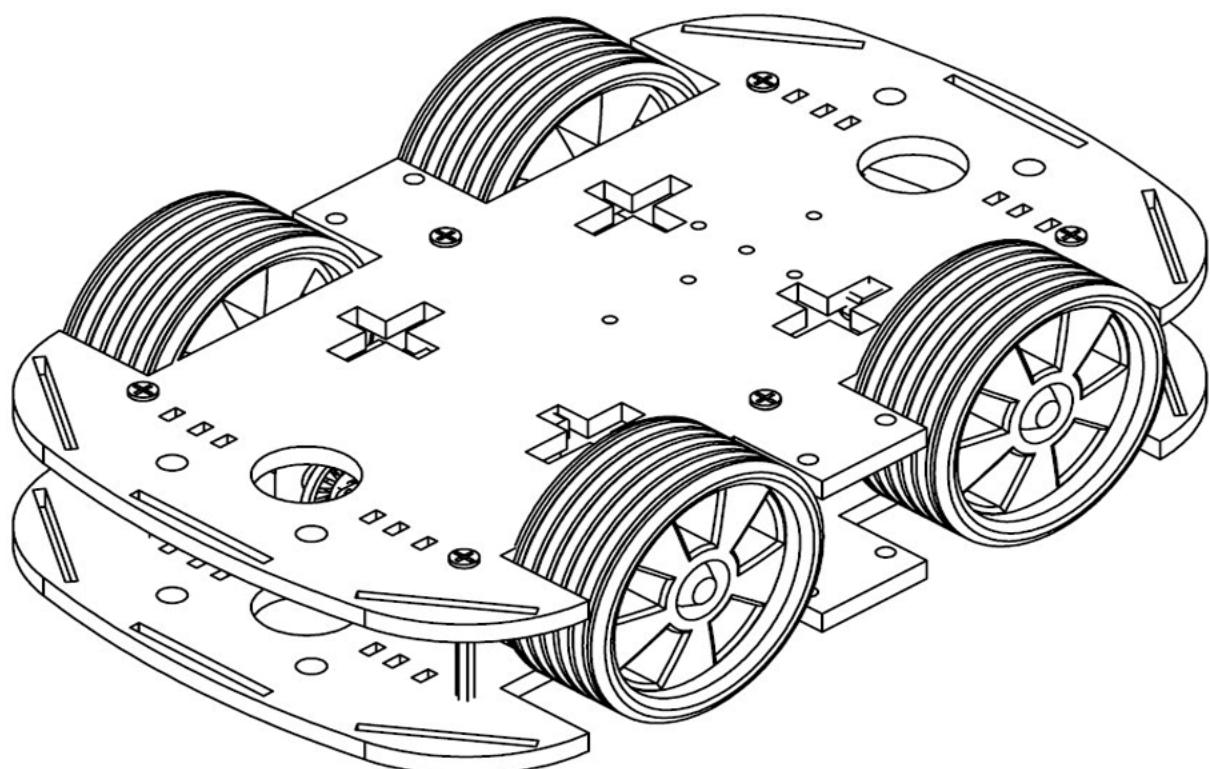
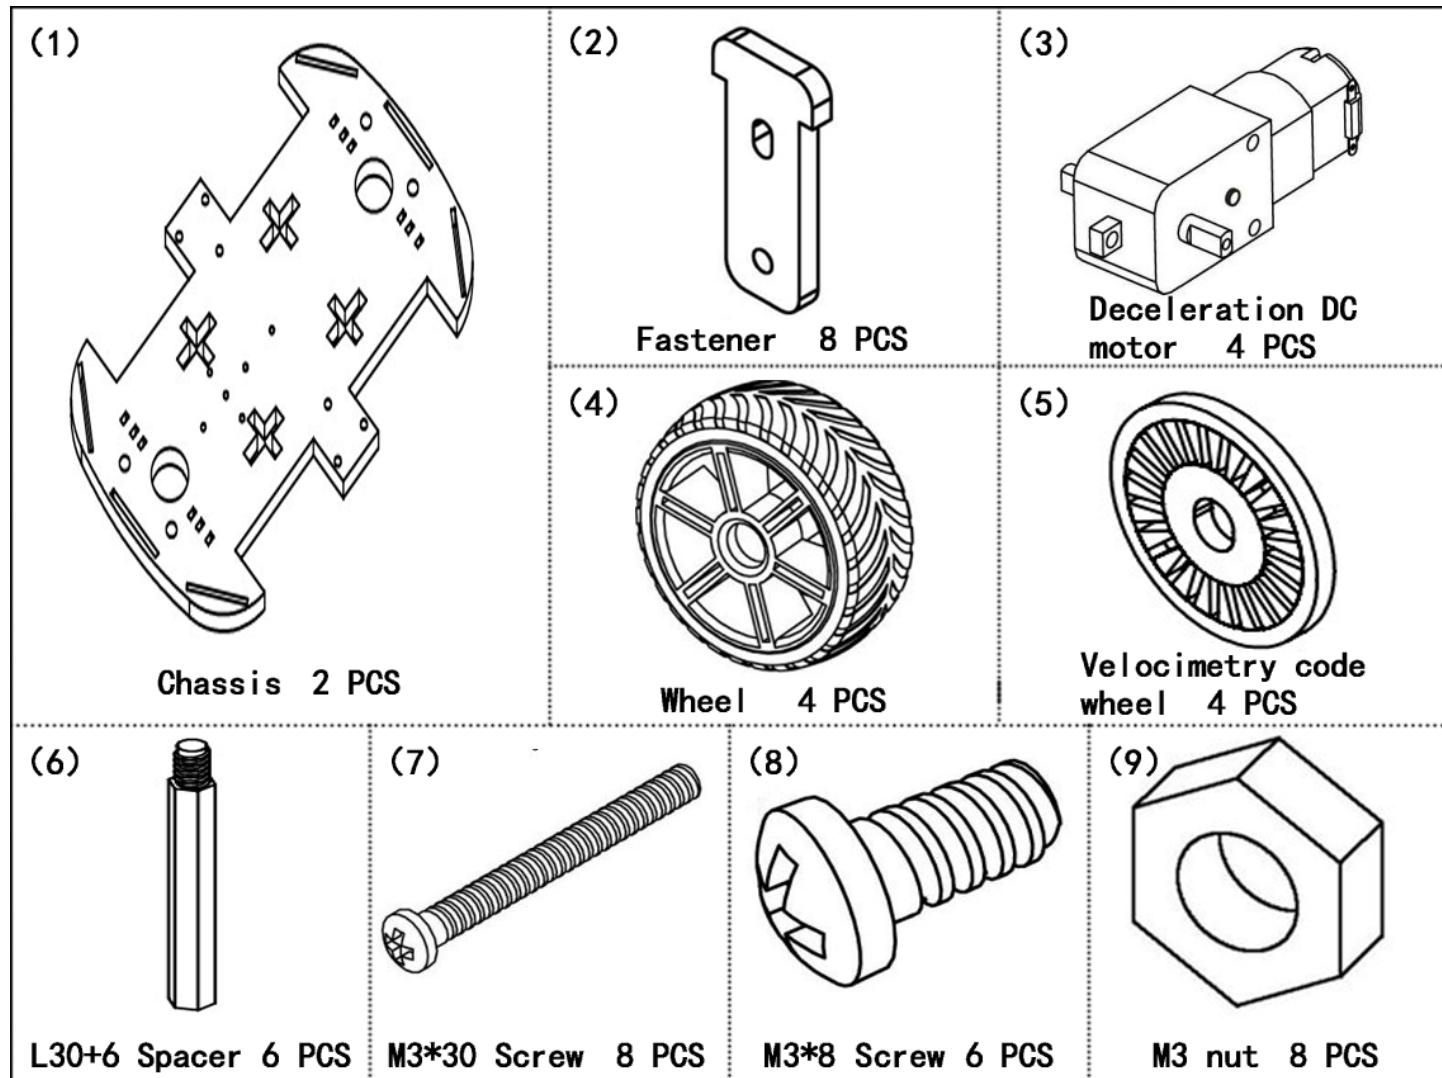



Smart car –ST4WD**Effect after installation**

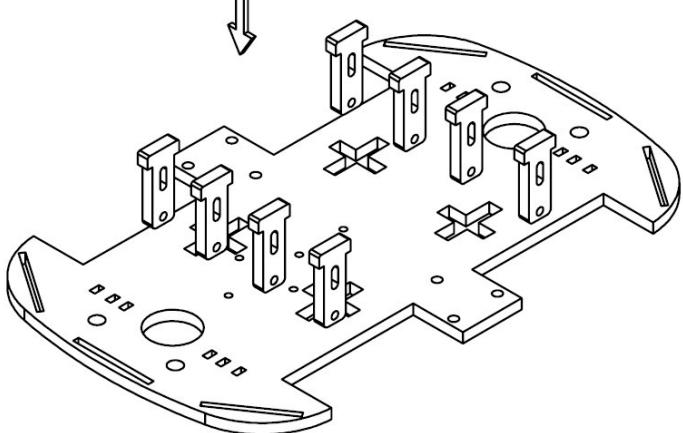


Step1: Insert the fastener into the chassis after tearing off the yellow protection wrap of the chassis, the fastener and the code wheel.

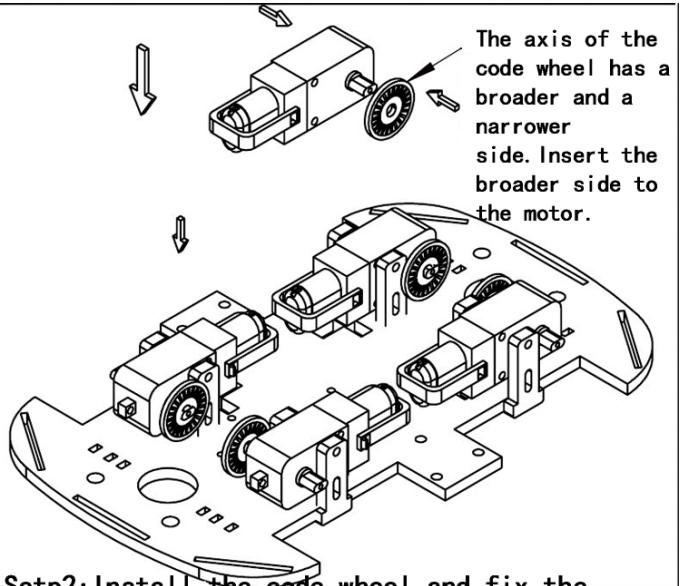


Step2: Install the code wheel and fix the motor to the chassis. (Attention:the copper sheet of the leading wire of the motor should face outward, the same side of the wheel)

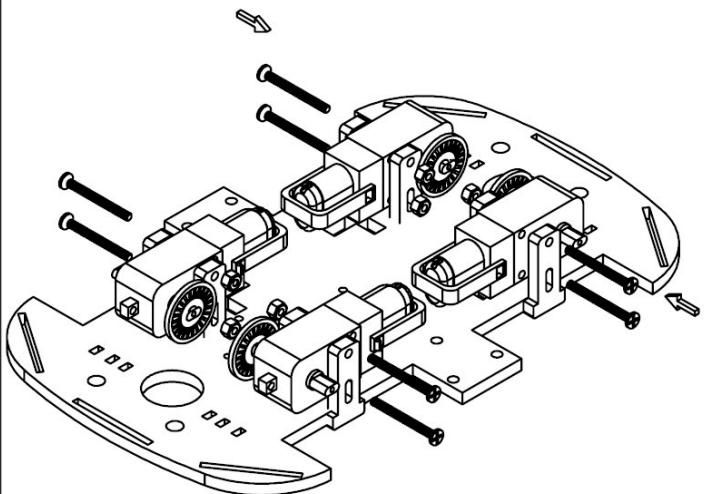

Step3: Fix the motor to the chassis, then insert and tighten the screws.

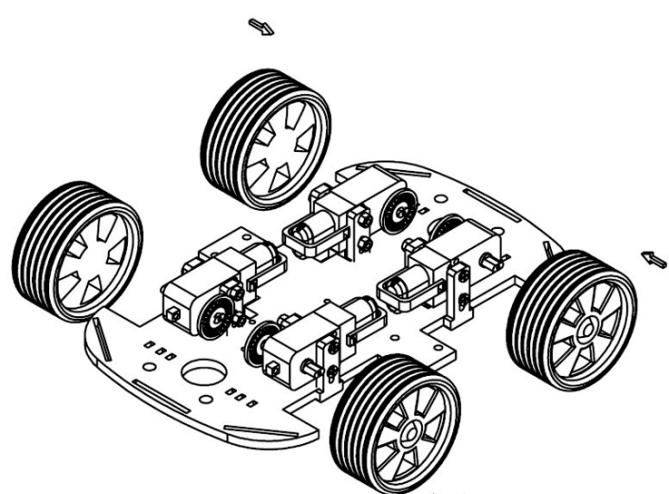

Step4: Hold tight and insert the motor (protection fastener) to the wheel.

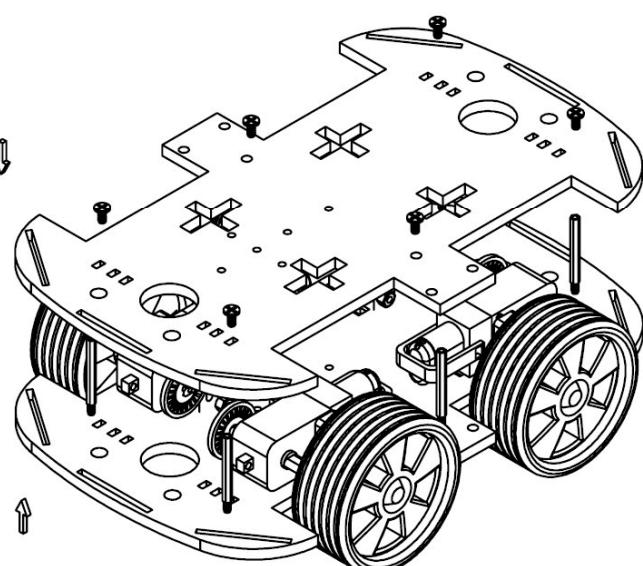

Step5: Insert the spacer, insert the screws from the downside and tighten them from the upper side. Installation completed.